

Tempo™ User's Guide



Spot Extractor

Dear Customer:

Congratulations on the purchase of your new spot extractor. As you are already aware, the scene of the detailing world is becoming more high tech, and we at Mytee Products, Inc. strive to keep you on the cutting edge with superior quality and technology.

Keep in mind that your spot extractor is a machine and neglect and abuse will cause unnecessary damage and void warranty. With simple maintenance however, your vacuum will give you quality performance for many years to come.

The labels on your unit are scratch resistant. They are made with a clear film. To achieve a high gloss finish, simply peel off the thin, clear layer.

If warranty questions arise, please consult your user's guide or get in touch with your distributor. If you have questions about maintenance, replacing parts or ordering parts, please call an authorized Mytee Products, Inc. service center. To see an updated list, visit our website at www.Mytee.com.

Before you begin cleaning, please read you user's guide thoroughly.

Sincerely, Customer Care Dept.

IMPORTANT INFORMATION

Model #	Serial #	
Distributor name and phone#		
-		
Date of purchase		

Table of Contents

General Safety
Warranty
RMA
Model Description/ Operation
Troubleshooting
Parts List

General Safety/Warnings

These precautions have been written for your safety and the safety of others in mind. These precautions MUST BE FOLLOWED at all times to avoid serious injury, harm, and/or death, and damage to the unit.

Warning: To reduce the risk of fire, electrical shock, or injury:

- 1. READ ALL INSTRUCTIONS BEFORE USING EXTRACTORS.
- 2. Use only as described in this manual. Use only manufacturer's recommended attachments.
- 3. Always unplug power cord from electrical outlet before attempting any adjustments or repairs.
- 4. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- 5. Do not pull or carry by cord. Do not close a door on cord or pull cord around sharp edges or corners.
- 6. Do not run appliance over cord. Keep cord away from heated surfaces.
- 7. Do not use with damaged cord or plug. If cord is damaged, repair immediately.
- 8. Do not use outdoors or on wet surfaces and/or standing water.
- 9. Always unplug or disconnect the appliance from the power supply before servicing. Unplug or disconnect the appliance from power supply when not in use.
- 10. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- 11. Do not use in areas where flammable or combustible material may be present.
- 12. Do not leave the unit exposed to harsh weather elements. Temperatures below freezing may damage components and void warranty.
- 13. Use only the appropriate handles to move and lift unit. Do not use any other parts of this machine for this purpose.
- 14. Keep hair, loose clothing, fingers, and all parts of body away from all openings and moving parts.
- 15. Use extra care when cleaning on stairs
- 16. To reduce the risk of fire or electric shock, do not use this machine with a solid-state speed control device.

MYTEE LIMITED WARRANTY POLICY

Mytee Products, Inc. endeavors to provide high quality products and product support to its customers and therefore backs up all of its new products purchased from Mytee Products Inc. ("Mytee") or any authorized Mytee distributor/service center with this limited warranty. This limited warranty begins on the date of the customer's purchase and is valid and available to the original purchaser only. Mytee's products are for commercial use only and are not intended for personal, family or household uses.

HOWEVER, OTHER THAN SET FORTH HEREIN, MYTEE GIVES NO WARRANTY, EXPRESS OR IMPLIED, AS TO DESCRIPTION, QUALITY, MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE, PRODUCTIVENESS, INFRINGEMENT, OR OTHER MATTER, OF ANY GOODS WHICH MYTEE SHALL SUPPLY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. MYTEE SHALL IN NO WAY BE RESPONSIBLE FOR THE PROPER USE AND APPLICATION OF THE GOODS. MYTEE NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR MYTEE ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF MYTEE'S GOODS. THIS LIMITED WARRANTY POLICY MAY BE CHANGED OR WITHDRAWN BY MYTEE AT ANY TIME WITHOUT NOTICE.

WEAR PARTS 90-DAY LIMITED WARRANTY: Mytee will replace all wear parts for 90 days from the date of original purchase. "Wear parts" are items which wear out as a result of usage or the passage of time and are consumed despite attempts to maintain them, such as gaskets, wheels, brass, cords, wires, electrical terminals, hoses, switches, thermostats, plastisol parts, filters, bearings, brushes, solenoids, o-rings, bulbs, heating elements, castors, or other parts deemed wear items in Mytee's sole discretion. This warranty covers the cost of replacement only and does not cover shipping or labor costs.

PUMP, VACUUM MOTOR AND HEATER 1-YEAR LIMITED WARRANTY: Mytee warrants that pumps, vacuum motors, and heaters will be free from manufacturing defects, defects in workmanship, and defects in material for one (1) year from the date of original purchase. This warranty does not apply and is void if the pump, vacuum motor, or heater has worn brush motors, water damage, chemical build-up, chemical damage, or evidence of abuse, neglect or tampering. This warranty covers the cost of replacement or repair only and does not cover shipping or labor costs.

HOUSING 3-YEAR LIMITED WARRANTY: For three (3) years from the date of purchase, Mytee warrants a percentage of the cost of replacement of rotationally-molded housings pro-rated as follows: Mytee will pay 100% of replacement cost in the first year from the date of purchase, 75% of replacement cost in the second year from the date of purchase and 25% in the third year from the date of purchase. Replacement cost does not include the cost of shipping or labor.

LIMITATION OF DAMAGES: THE REMEDY OF REPLACEMENT OR REPAIR OF ANY DEFECTIVE GOODS SHALL BE THE EXCLUSIVE REMEDY UNDER ANY WARRANTY MADE BY MYTEE, WHETHER EXPRESS OR IMPLIED. IN NO EVENT SHALL MYTEE BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, PROPERTY DAMAGES, OR PERSONAL INJURIES.

All limited warranties are void for, and Mytee does not warrant in any way, any product that evidences misapplication, improper installation, abuse, lack of maintenance, negligence in use or care, abnormal use, alteration of design, use of incompatible or corrosive chemicals, use in a rental service, and/or servicing, installation of parts, or repairs by anyone other than Mytee or a Mytee authorized distributor or service center. Mytee may make changes in products it manufactures and

markets at any time; these changes are made without obligation to change, retrofit, or upgrade any product previously sold or manufactured.

Mytee has no obligation to honor the limited warranties set forth herein unless the original purchaser, promptly upon discovering the warranty claim and prior to continuing to use the product, contacts Mytee or a Mytee authorized distributor or service center to describe the claim and to receive and follow instructions for documenting and resolving the claim. In addition, the purchaser must provide the product to which the claim applies to Mytee or a Mytee authorized distributor or service center for a thorough inspection.

If any provision or portion of this limited warranty policy is found to be unenforceable, then the remaining provisions and portions shall remain valid and enforceable. If any provision or portion of this limited warranty policy is found to be limited by law, then that provision or portion shall be construed to make it effective within the bounds of law. For example, if there are legal limitations on the duration of warranties, the warranties made herein shall be construed to have the minimum duration required by law, or, if there are legal limitations of exclusion of remedies, the exclusions made herein shall be construed to apply to the fullest extent possible without violating the law.

The validity, construction and performance of this warranty policy shall be governed by the laws of the State of California, without respect to conflicts of laws principles. The exclusive jurisdiction of any legal action arising from or related to this warranty policy shall be in the State of California and no legal action shall be commenced elsewhere.

RETURNED MATERIAL AUTHORIZATION PROCEDURE

It is the responsibility of any Authorized Service Center (ASC) or Distributor with written authorization to ensure the Customers equipment is repaired as soon as possible. Only Mytee Products, Inc. or it's authorized dealers with written authorization, service centers, and agents may make warranty repairs on these products. <u>All others do so at their own risk and expense.</u>

The Distributor must follow Mytee Products, Inc. standard RMA procedure:

- 1. When a repair falls within the Warranty time period for a piece of equipment, the Distributor will fill out a RMA/Warranty claim form. This form will act as a repair order to replace any defective parts.
- 2. All defective parts must be returned to Mytee Products, Inc. with the RMA/claim form for evaluation at the customer's expense. This shipping is non-refundable. All warranty claims are subject to an evaluation by Mytee Products, Inc. to determine if warranty will be approved. Any credit for repair and/or parts will only be issued upon evaluation and approval from Mytee Products, Inc.
- 3. When Warranty is approved, the Distributor's account will be credited for the replacement part(s). Mytee Products, Inc. will ship the warranted replacement part(s) to the Distributor prepaid. If Warranty is denied the Distributor's account will not be credited for any parts sent for this claim.

MODEL DESCRIPTION/ OPERATION


S-300/ TempoTM

The TempoTM spot extractor is equipped with a 55-psi pump and a two stage vacuum motor. The solution and recovery tanks are 1 1/2 gallons. It is a single cord unit. The power cord is 12/3 25', and it draws about 9-amps (115v). To run effectively, use a dedicated 15-amp outlet.

NOTE: All units come with an 8' vacuum and solution hose assembly with 3" S/S upholstery tool.

OPERATION:

- 1. Plug in yellow electrical cord into a dedicated 15-amp circuit outlet
- 2. Fill solution tank with water, and add 1/2 cup of rinse additive. DO NOT OVERFILL!!
- 3. Attach vacuum and solution hoses to appropriate connections on the machine and your wand. Make sure the quick disconnects snap together firmly. As you do this, always inspect hoses for cracks or fraying. Do not use if hoses are damaged.
- 4. Turn power switch ON, and press trigger on wand until there is a continuous flow of water. Your pump is now primed.
- 5. With the wand you may begin cleaning. By pulling the trigger, you will dispense the solution onto the desired area. Because the vacuum is on, the fluid will quickly be sucked back into the wand. You will notice that the area you have just cleaned will be damp. This is normal. To speed up the drying process, use the model 2500 Windstar or 2200 Windstorm airmover.

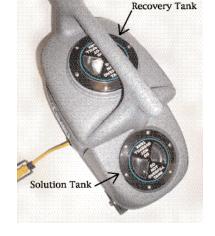

TROUBLESHOOTING

SYMPTOM: Unit will not turn on.

PROBLEM: Not plugged in.

SOLUTION: Plug machine in proper outlet.

PROBLEM: Circuit breaker has popped.

SOLUTION: Reset circuit breaker. Make sure no other items are running on the

same circuit as machine. Outlet must be a 20-amp circuit.

PROBLEM: Wire from power cord has become disconnected from terminal block.

SOLUTION: Reattach wire to terminal block.

SYMPTOM: Pump is not running properly.

PROBLEM: Quick disconnects are not completely locked together.

SOLUTION: Snap quick disconnects firmly together.

PROBLEM: Switch on switch plate is bad.

SOLUTION: Replace switch.

PROBLEM: Jets on wand are clogged.

SOLUTION: Clean jet with soft wire brush or remove jet and flush clean.

PROBLEM: Filters are clogged.

SOLUTION: Remove filters and rinse with clean water.

PROBLEM: The solution tank is empty.

SOLUTION: Fill the solution tank up with a premixed detergent.

PROBLEM: Pump wire has become disconnected.

SOLUTION: Reconnect wire.

PROBLEM: Brass check valve is stuck. SOLUTION: Replace with new check valve.

PROBLEM: Pump motor brushes are worn out.

SOLUTION: Replace pump.

PROBLEM: Pump is pulsating.

SOLUTION: Tighten all hoses. Check for leaks.

PROBLEM: Pressure switch on pump head is bad. SOLUTION: Replace with new pressure switch.

SYMPTOM: Vacuum motor not working properly.

PROBLEM: Switch on switch plate is bad.

SOLUTION: Replace switch.

PROBLEM: Hose not connected tightly to wand or machine.

SOLUTION: Connect hose tightly.

PROBLEM: Wand is clogged with hair, carpet fibers and or debris.

SOLUTION: Clean wand.

PROBLEM: Drain valve is not shut completely. SOLUTION: Close drain valve completely.

PROBLEM: Vacuum tank lid is not on tightly. SOLUTION: Secure the vacuum tank lid on tightly.

PROBLEM: Vacuum tank lid or the vacuum tank is cracked. SOLUTION: Replace the vacuum tank lid or the vacuum tank.

PROBLEM: Vacuum hose is cracked or split.

SOLUTION: Replace vacuum hose.

PROBLEM: Vacuum motor armature is worn out.

SOLUTION: Replace vacuum motor.

PROBLEM: Water is coming out of the vacuum motor.

SOLUTION: Use a low foaming detergent.

	DESCRIPTION	PART NUMBER
	2 stage vacuum motor	C316
	55 PSI pump	C308
	25' power cord	E585
191	2 position switch	E515
	Tank lid	G030
	Dump valve lid	G036
	3" wheel	H358











DESCRIPTION	PART NUMBER
8' Hose and wand assembly with 3" upholstery tool	8410
1/4" male QD	B101
1/4" female QD	B102
1/4" filter strainer for solution tank	B119
filter strainer for recovery tank	H664