SURFACE MOUNTED RETRACTABLE CLOTHES LINE

³⁄₁₆" DIA [Ø4.8]
HOLES TYP 2
MOUNTING BRACKET

2" [51]
3-⁵⁄₈" [92]

FRONT VIEW

6'-0" [1829]
MAXIMUM SPACING BETWEEN
OPPOSITE FACES OF FINISHED WALLS

FINISHED WALLS

NOTE: ALL DIMS INCH [MM]

LOCKING NUT
VINYL CORD KNOB

CORD COVER PLATE

NYLON OVAL DISC

NYLON DISC

SIDE VIEW

DIMPLED HOLES
FOR #10 OVAL
HEAD SCREWS
(SUPPLIED
BY OTHERS)

2-⁵⁄₈" [67]
1-³⁄₄" [44]

1-¼" [32]

FRONT VIEW

SPECIFICATION

Surface Mounted Retractable Clothes Line shall have cord cover plate, locking nut and knob retainer fabricated of type 304 stainless steel alloy 18-8 with satin finish. Mounting bracket shall be heavy duty zinc plated steel. Nylon gaskets shall be supplied to isolate flanges from finished wall surface. Unit shall have spring actuated reel with 72" (1829mm) vinyl covered cord. Cord knob shall be white vinyl. Locking knurled nut to hold stretched line taut shall be provided on cord cover.
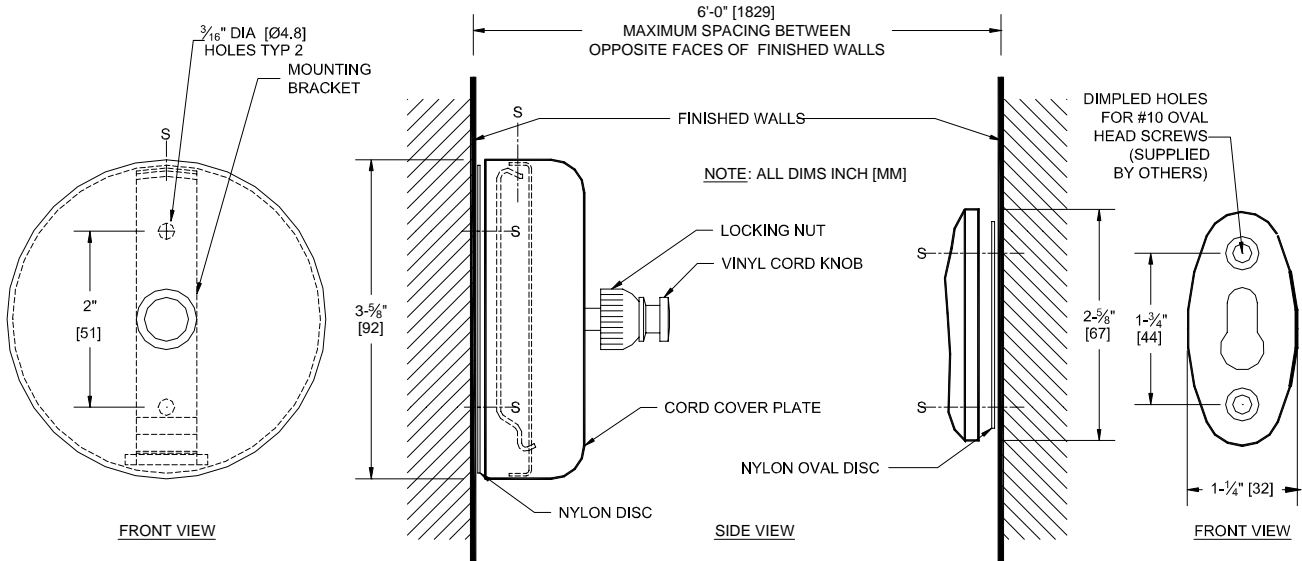
Surface Mounted Retractable Clothes Lines shall be Model Nº 0712 of American Specialties, Inc., 441 Saw Mill River Road, Yonkers, NY 10701-4913

INSTALLATION

For compliance with ADA Accessibility Guidelines, install unit so that cord knob is 48" (1219mm) maximum above finished floor. Surface mount cord cover plate mounting bracket and nylon disc to wall with two self tapping screws (supplied by others). Install cord cover plate over bracket and nylon disk. Secure cover plate in place by screwing the set screw in the top of the bracket. Surface mount knob retainer and oval nylon disc on opposite wall with two self tapping screws (supplied by others). For masonry walls, installer shall provide fiber plugs or expansion shields. For dry walls or plaster walls, installer shall provide concealed backing or toggle bolts to comply with local building codes and to suit wall conditions.

OPERATION

Release the locking nut, grasp the vinyl cord knob and pull out a sufficient amount to clothes line to permit attaching the cord knob to the knob retainer. Tighten locking nut sufficiently to hold stretched line taught. The clothes line is retracted into the cover plate mechanism by first releasing the locking nut and then removing the cord knob from the knob retainer, thereby allowing the spring mechanism to automatically retract the clothes line.